HOME
DECORATORS
COLLECTION

SK16790A AMBROSE HALL TREE 70"Hx40"Wx18"D

INV#11572

ASSEMBLY INSTRUCTIONS

Made In China

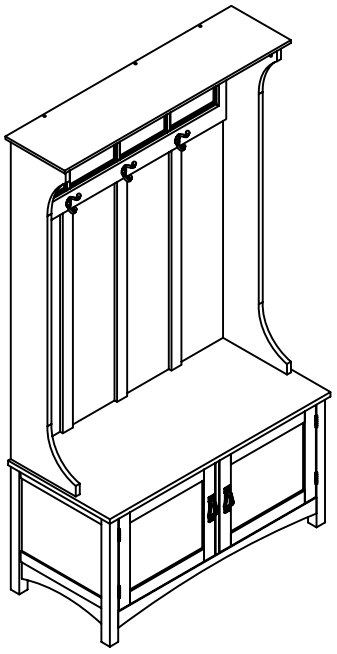

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST

A 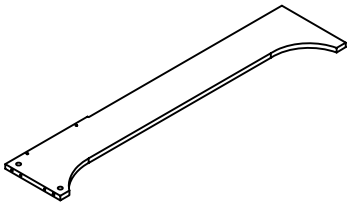 UPPER LEFT SIDE PANEL-1PC	B 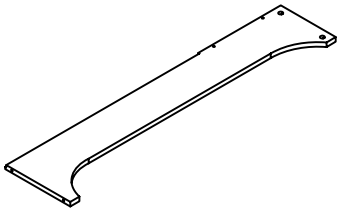 UPPER RIGHT SIDE PANEL-1PC	C 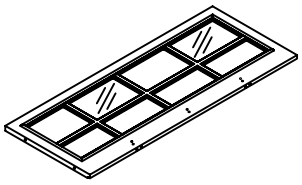 TOP MIRROR FRAME-1PC
D 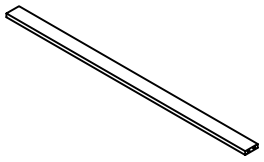 BACK SUPPORT SLAT-3PCS	E 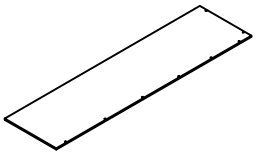 UPPER LEFT BACK PANEL-1PC	F 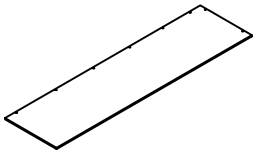 UPPER RIGHT BACK PANEL-1PC
G 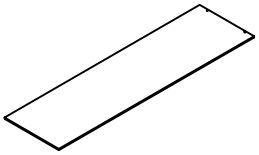 UPPER CENTER BACK PANEL-2PCS	H 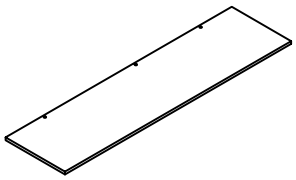 TOP PANEL-1PC	I 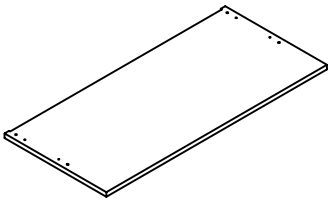 FIXED PANEL-1PC
J 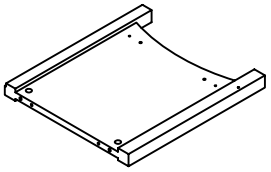 LOWER LEFT SIDE FRAME-1PC	K 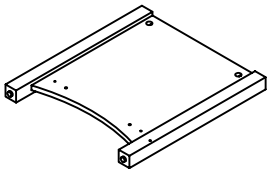 LOWER RIGHT SIDE PANEL-1PC	L 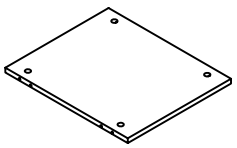 DIVIDER-1PC

M 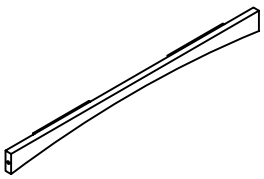 FRONT CROSS BAR-1PC	N 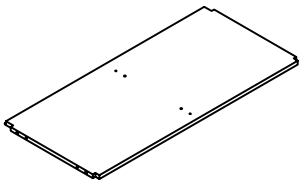 BOTTOM PANEL-1PC	O 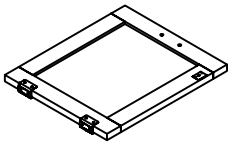 LEFT DOOR-1PC
P 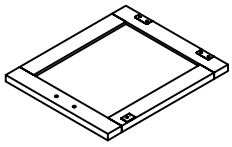 RIGHT DOOR-1PC	Q 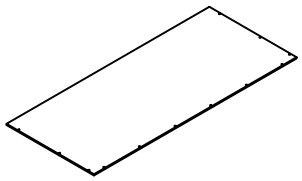 LOWER BACK PANEL-1PC	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

a WOOD DOWEL-39PCS	b  CAM LOCK BOLT-18PCS	c CAM LOCK-18PCS
d 5/8"L ROUND HEAD SCREW-61PCS	e 1"L FLAT HEAD SCREW-4PCS	f HANDLE-2PCS
g HANDLE BOLT-4PCS	h 1-1/2" FLAT HEAD SCREW-7PCS	i MAGNET-2PCS
j METAL PLATE-23PCS	k LONG PLASTIC COVER-8PCS	l DOUBLE HOOK-3PCS
m 1/2"L FLAT HEAD SCREW-14PCS	n SHORT PLASTIC COVER-4PCS	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

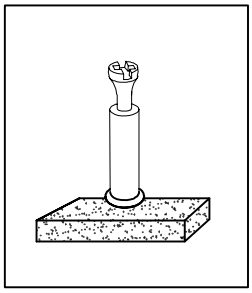

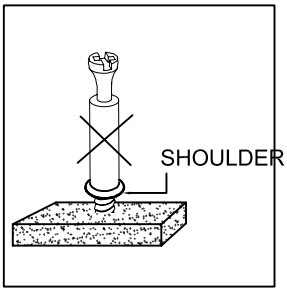

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

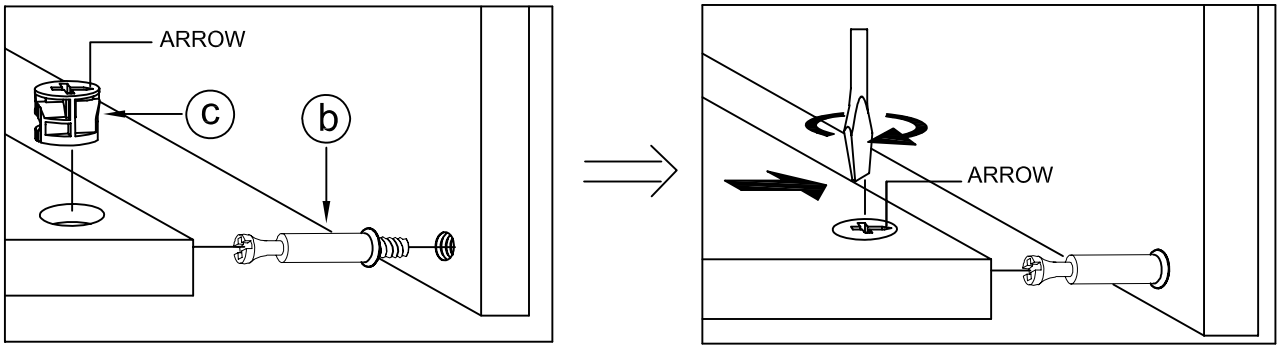

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

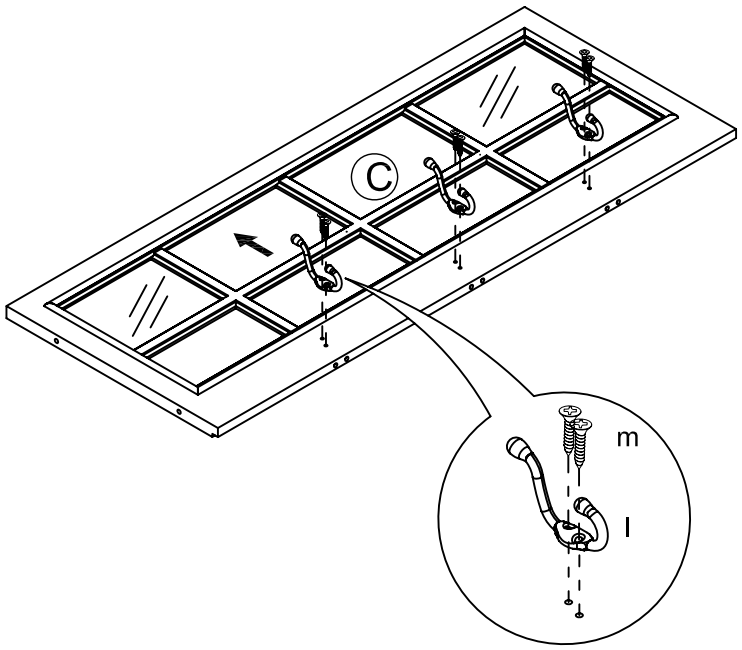

● ATTACH THE DOUBLE HOOK (l) ONTO THE TOP MIRROR FRAME (C) BY USING THE 1/2” L FLAT HEAD SCREW (m).

FIG 2

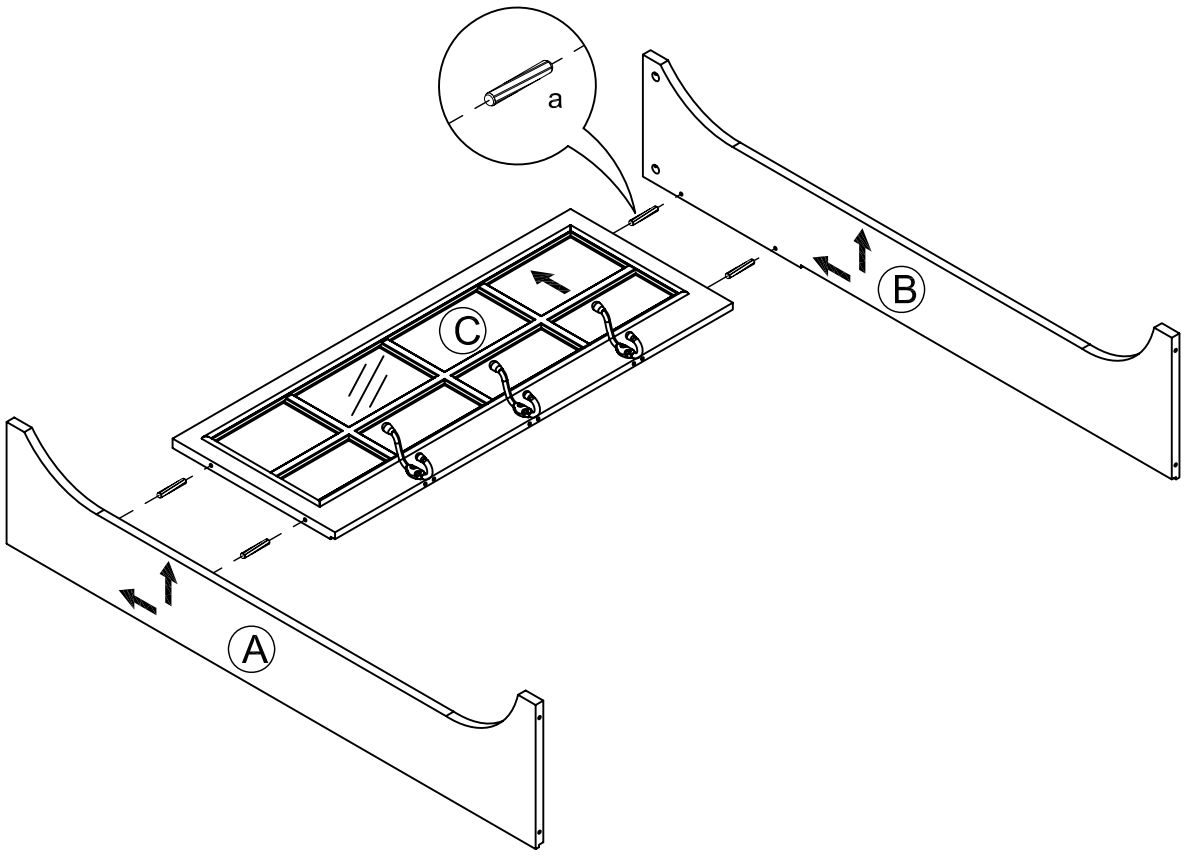

- INSTALL THE WOOD DOWEL (a) INTO THE TOP MIRROR FRAME (C).
- JOIN THE UPPER LEFT SIDE PANEL (A) AND THE UPPER RIGHT SIDE PANEL (B) TO THE TOP MIRROR FRAME (A) BY USING WOOD DOWEL (a).

FIG 3

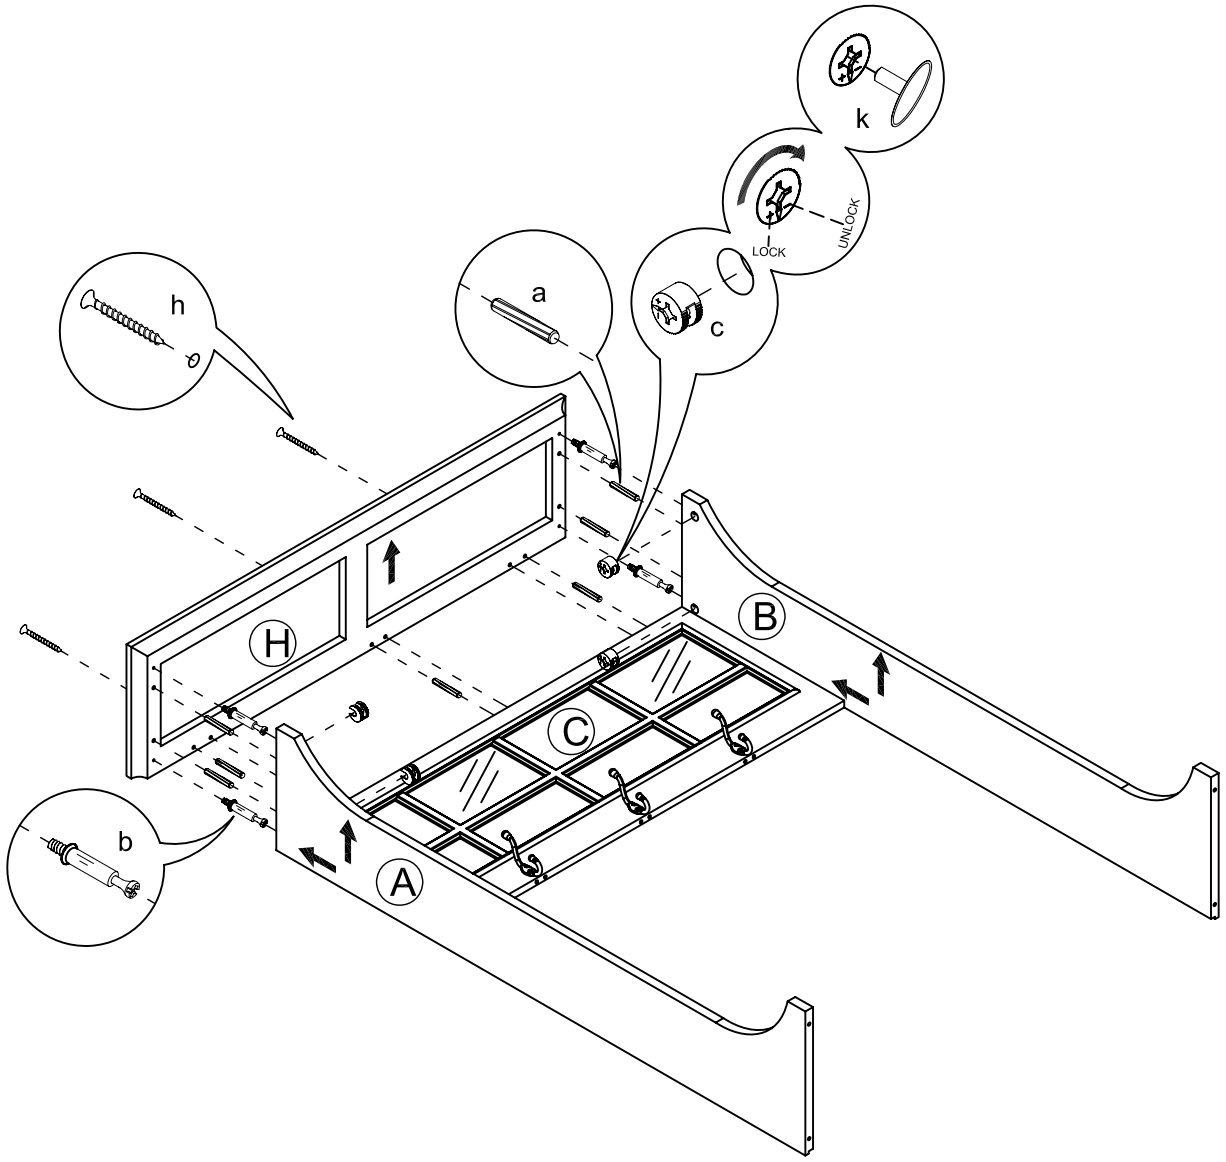

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (H).
- JOIN THE TOP PANEL (H) TO THE ASSEMBLED PART BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE LONG PLASTIC COVER (k).
- TIGHTEN THE TOP PANEL (H) AND THE TOP MIRROR FRAME (C) BY USING THE 1-1/2”L FLAT HEAD SCREWS (h).

FIG 4

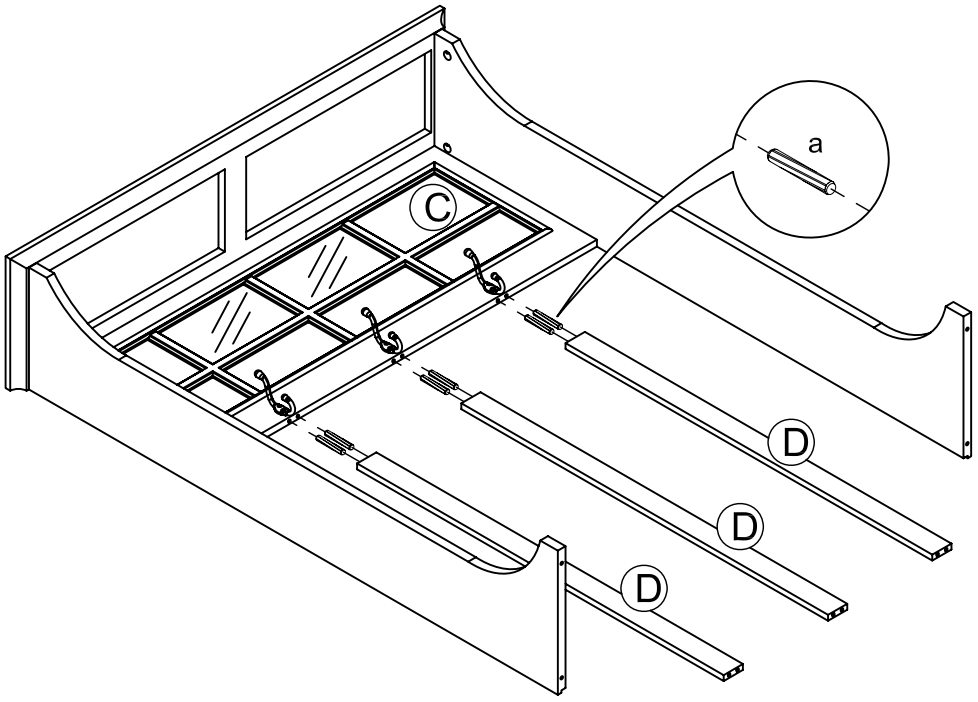

- INSTALL THE WOOD DOWEL (a) TO THE BACK SUPPORT SLATS (D).
- JOIN THE BACK SUPPORT SLATS (D) TO THE ASSEMBLED PART BY USING THE WOOD DOWEL (a).

FIG 5

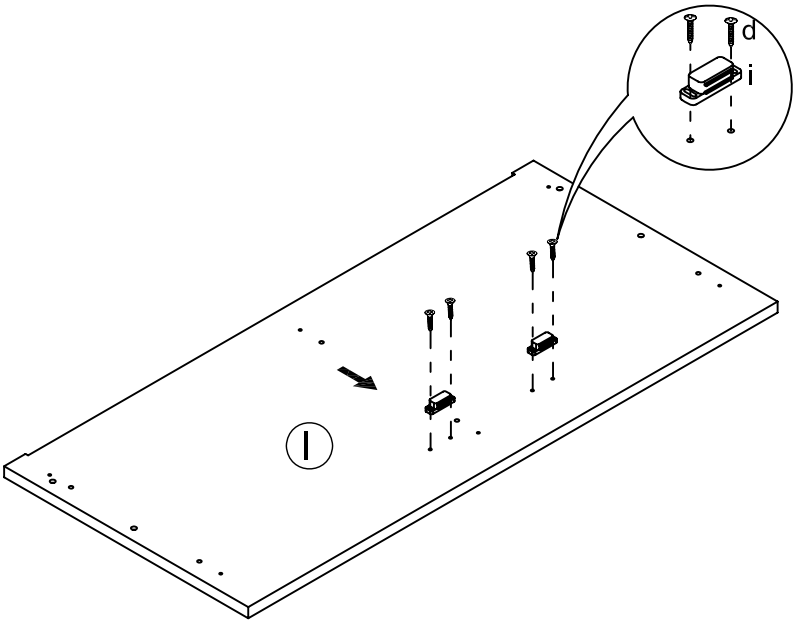

- TIGHTEN THE MAGNET (i) TO THE FIXED PANEL (I) BY USING THE 5/8”L ROUND HEAD SCREW (d).

FIG 6

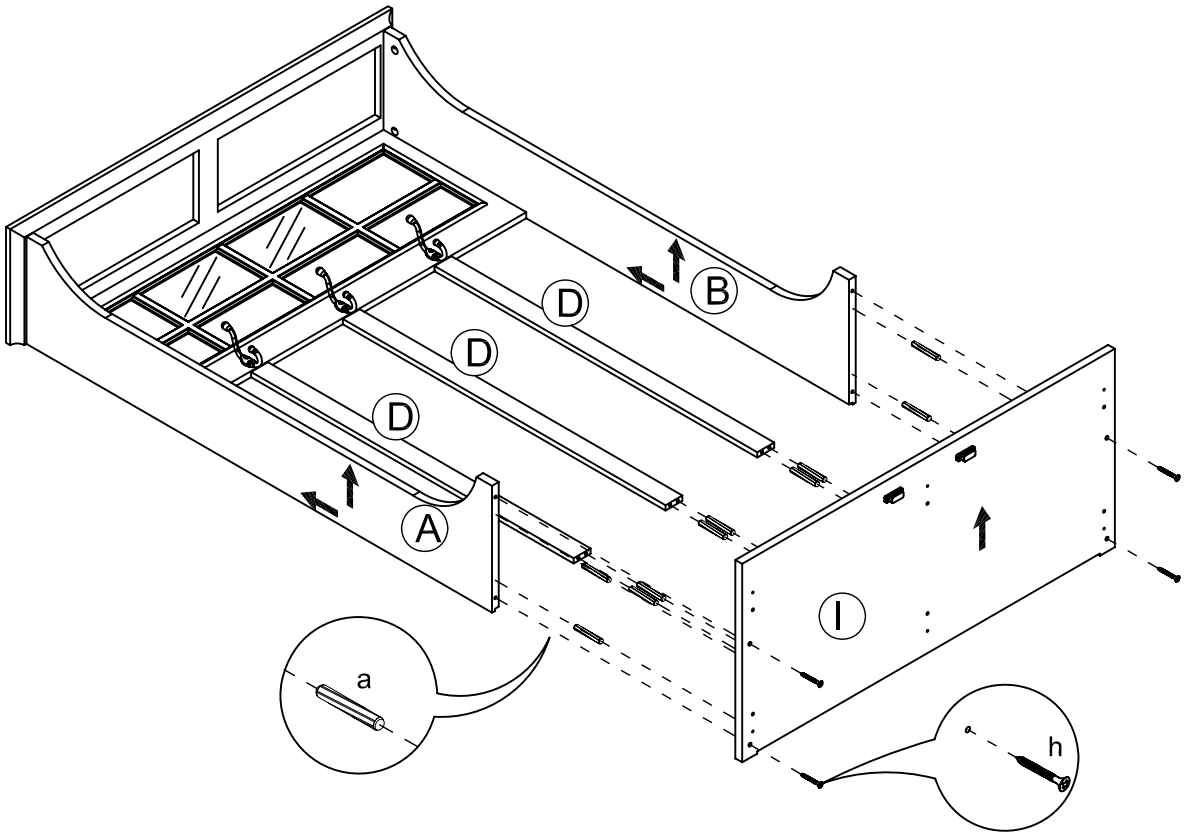

- INSTALL THE WOOD DOWEL (a) INTO TOP OF THE FIXED PANEL (I).
- JOIN THE FIXED PANEL (I) TO THE ASSEMBLED PART BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE FIXED PANEL (I) TO THE ASSEMBLED PART BY USING THE 1-1/2"L FLAT HEAD SCREW (h) TRHOUGH PRE-DRILLED HOLES FROM BOTTOM OF THE FIXED PANEL (I).

FIG 7

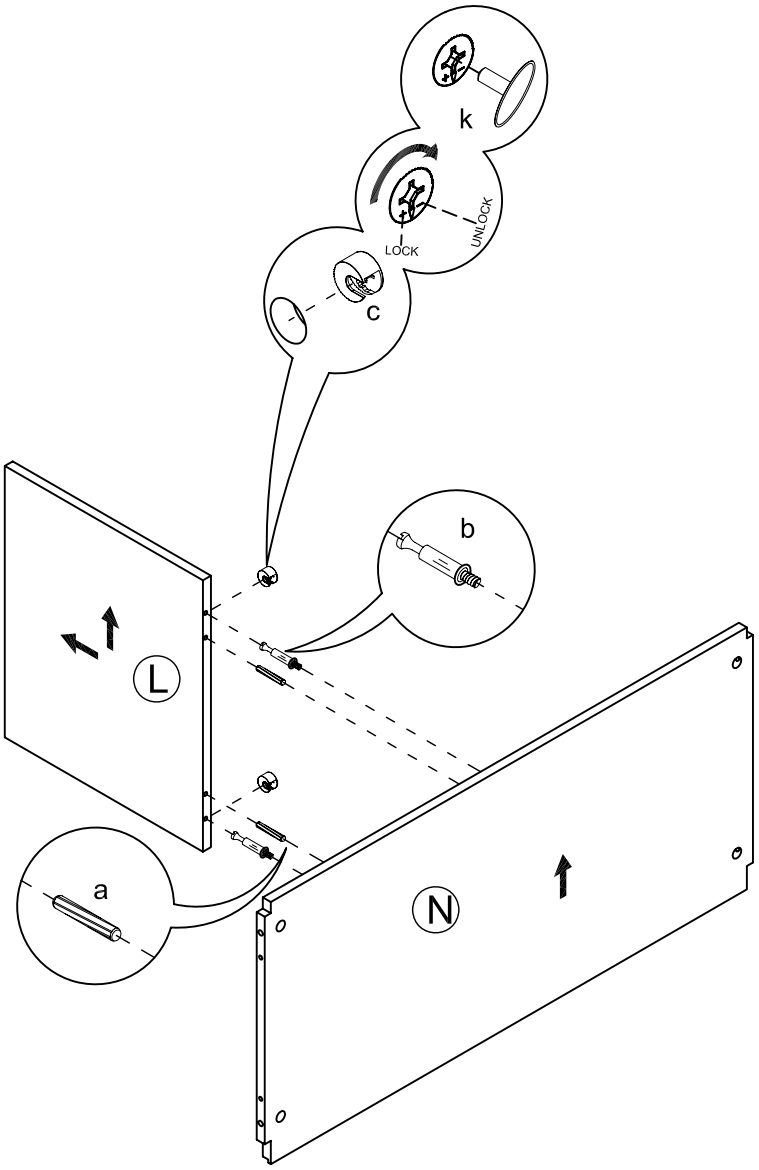

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) IN TO THE BOTTOM PANEL (N).
- JOIN THE DIVIDER (L) TO THE BOTTOM PANEL (N) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE LONG PLASTIC COVER (k).

FIG 8

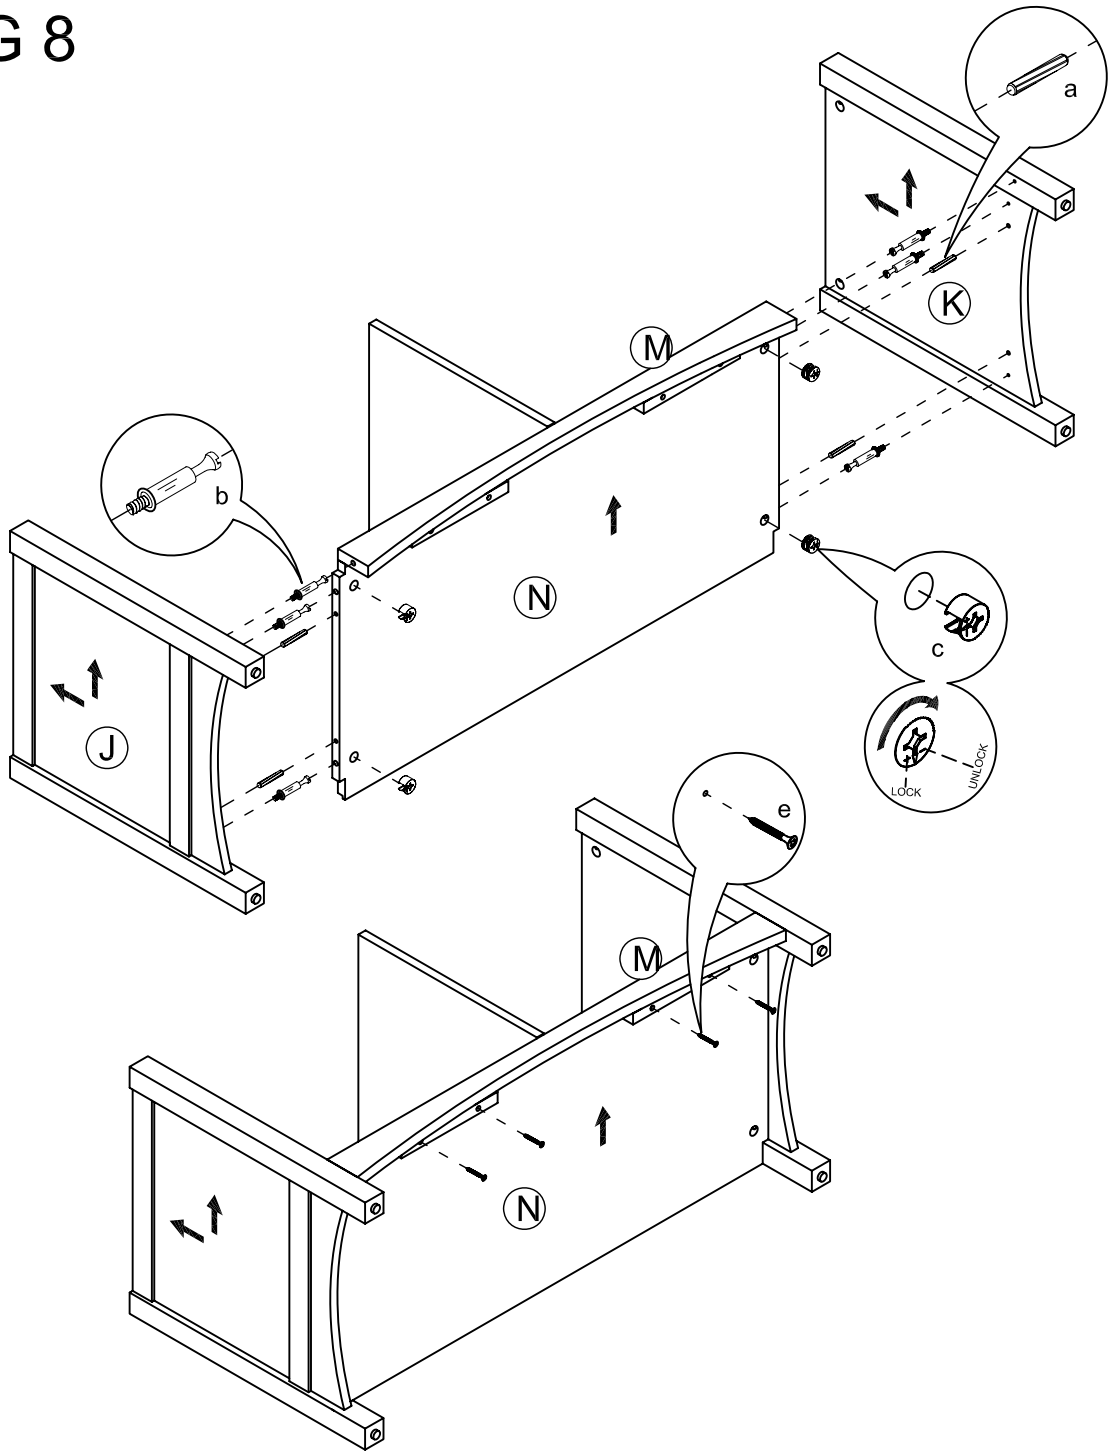

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LOWER LEFT SIDE PANEL (J) AND THE LOWER RIGHT SIDE PANEL (K).
- JOIN THE LOWER LEFT SIDE PANEL (J) AND THE LOWER RIGHT SIDE PANEL (K) TO THE BOTTOM PANEL (N) AND THE FRONT CROSS BAR (M) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- TIGHTEN THE FRONT CROSS BAR (M) TO THE BOTTOM PANEL (N) BY USING 1”L FLAT HEAD SCREW (e).

FIG 9

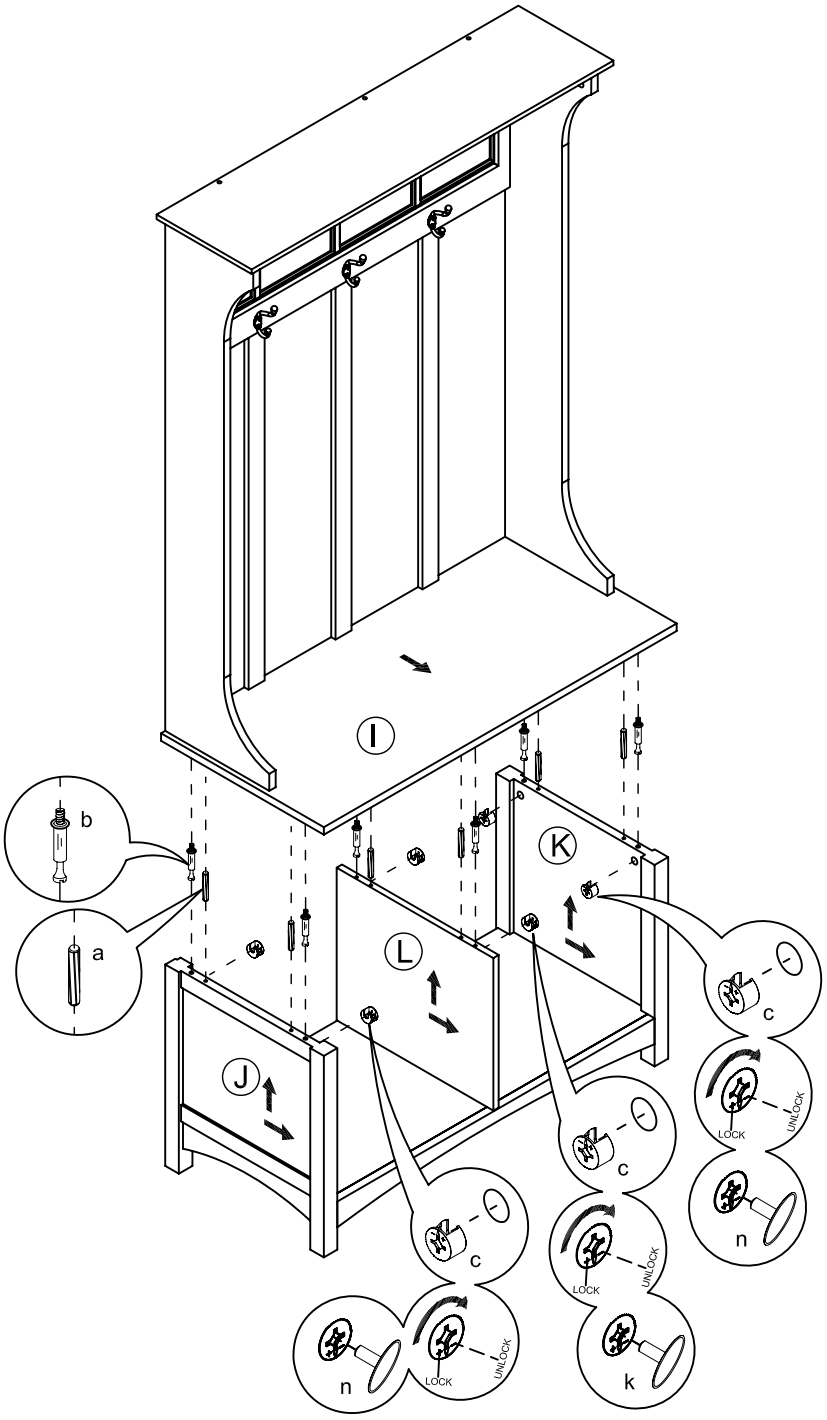

- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) IN TO BOTTOM OF THE FIXED PANEL (I).
- JOIN TWO ASSEMBLED PARTS BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES ON THE LOWER LEFT SIDE PANEL (J) AND THE LOWER RIGHT SIDE PANEL (K) WITH THE SHORT PLASTIC COVER (n).
- COVER CAM HOLES ON THE DIVIDER (L) WITH THE LONG PLASTIC COVER (k).

FIG 10

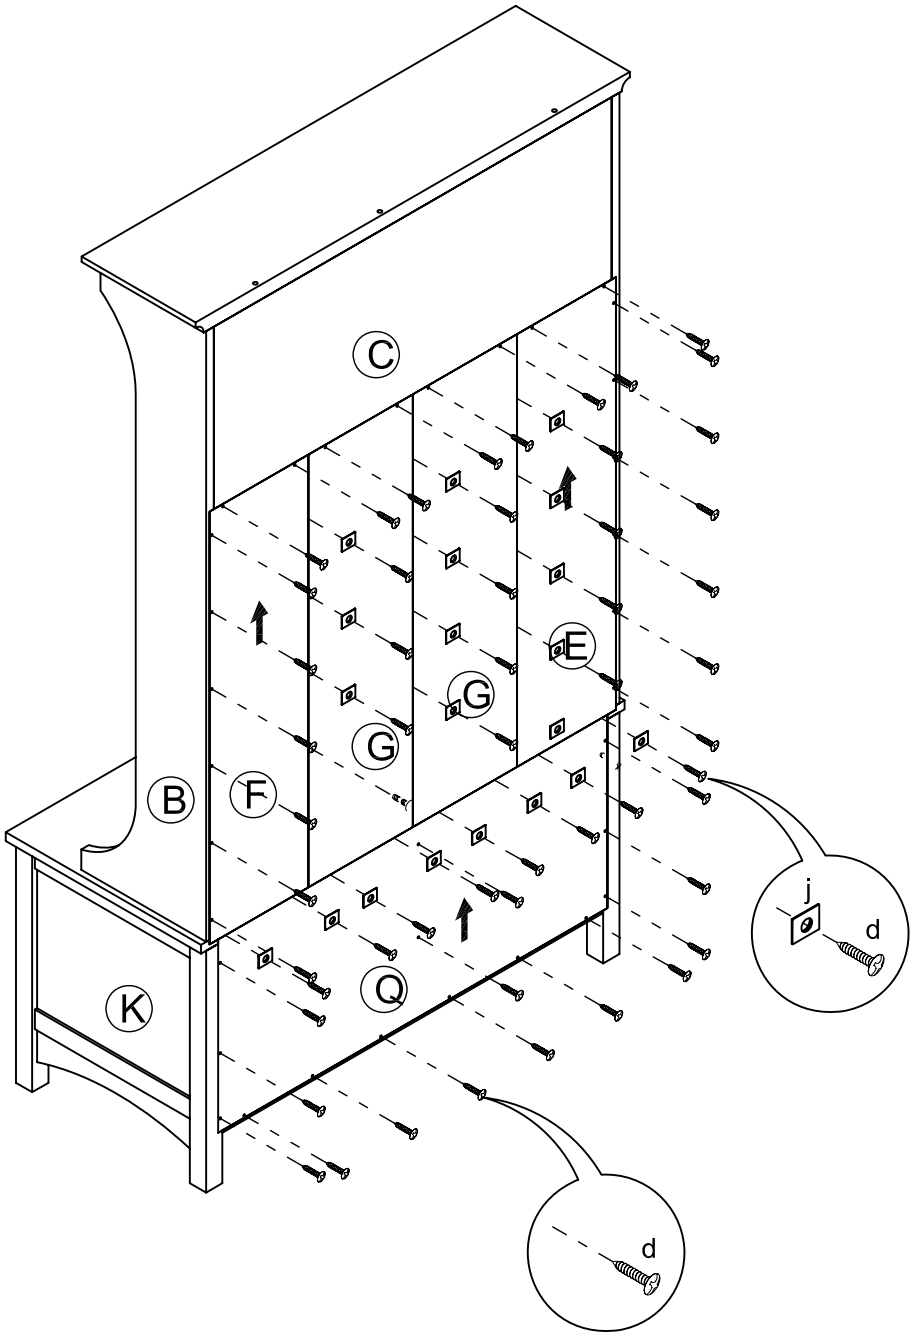

- TIGHTEN THE UPPER LEFT BACK PANEL (E), THE UPPER RIGHT BACK PANEL (F), THE UPPER CENTER BACK PANEL (G), AND THE LOWER BACK PANEL (Q) BY USING THE 5/8”L ROUND HEAD SCREW (d) AND THE METAL PLATE (j).

FIG 11

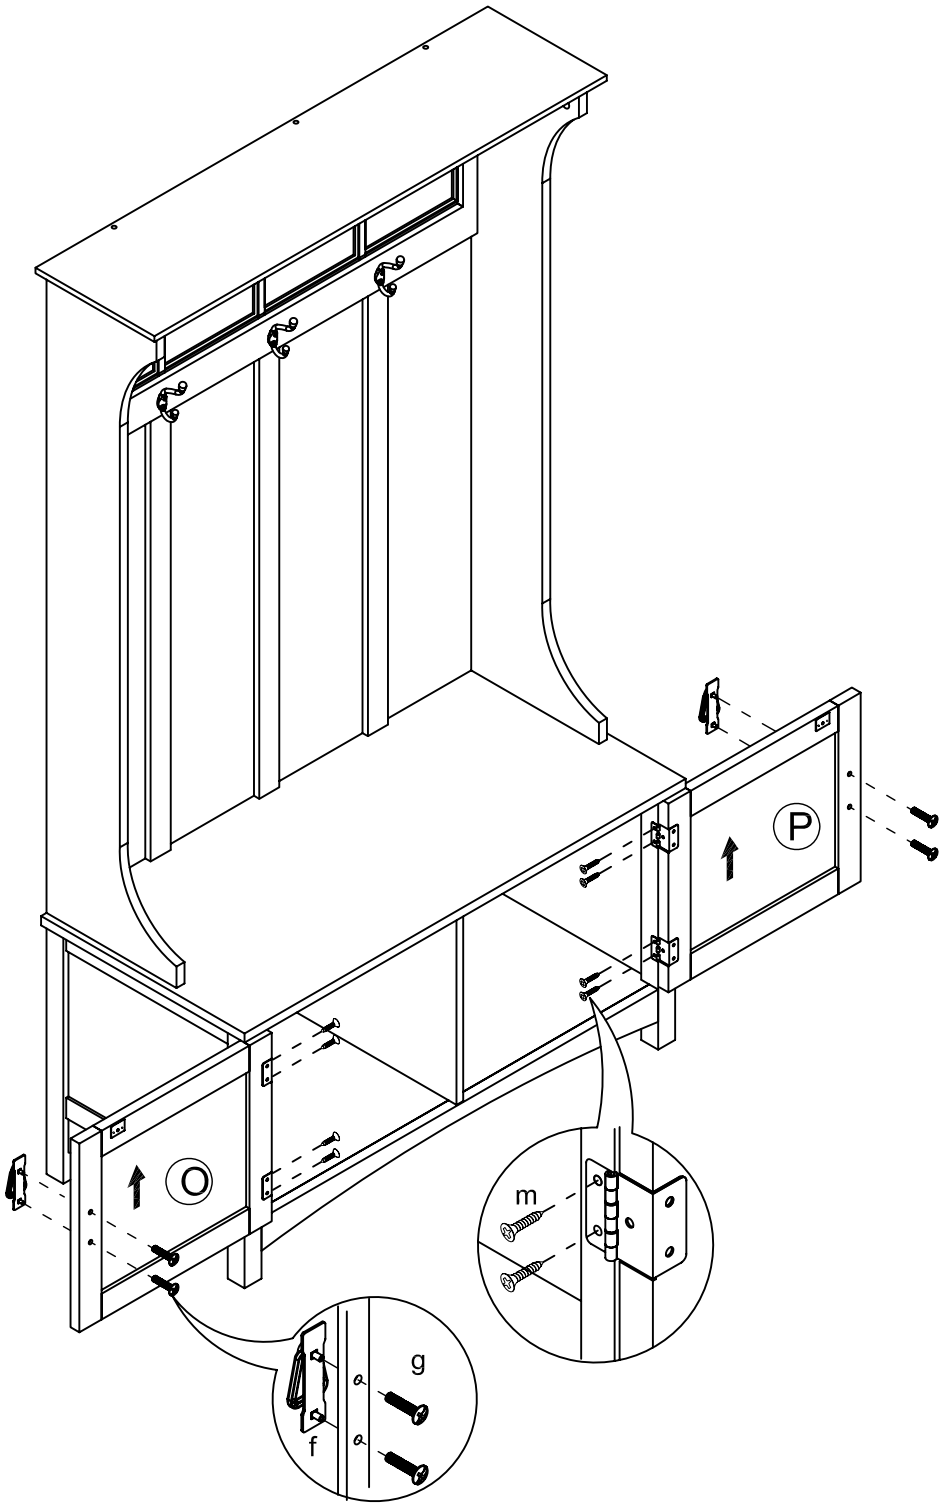

- ATTACH THE LEFT DOOR (O) AND THE RIGHT DOOR (P) TO THE ASSEMBLED PART BY USING THE 1/2” FLAT HEAD SCREW (m).
- TIGHTEN THE HANDLE (f) ONTO THE LEFT DOOR (O) AND THE RIGHT DOOR (P) BY USING THE HANDLE BOLT (g).